

Ref. no. WOGRK007(v1),

Note, this installation requires advanced carpentry skills.

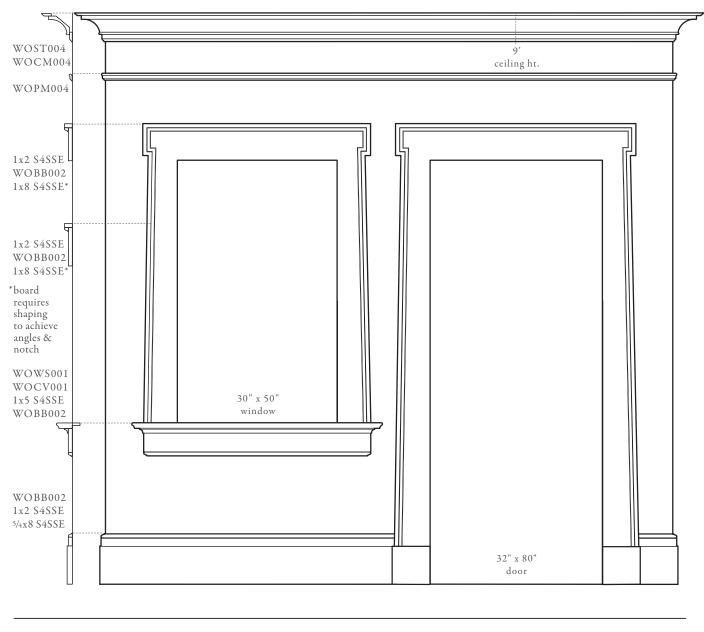


		STOP MOLDING	WOST004		WINDOW STOOL	WOWS001
	\smile	CROWN	WOCM004		APRON	1x5 S4SSE
	-	PICTURE MOLD	WOPM004	L	COVE	WOCV001
		BOARD	1x2 S4SSE			5/4x8 S4SSE
			1x8 S4SSE			5/4x8 S4SSE
	•	BAND MOLDING	WOBB002	Block cut from 5/4x8 and backed by the casing.		


Selected Details, Ref. No. WOGRK007

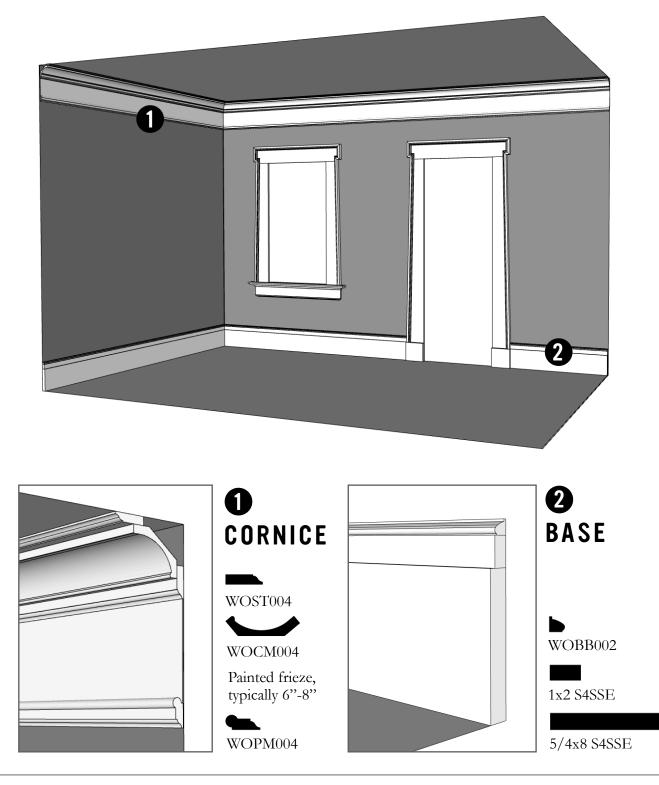

Selected Details, Ref. No. WOGRK007

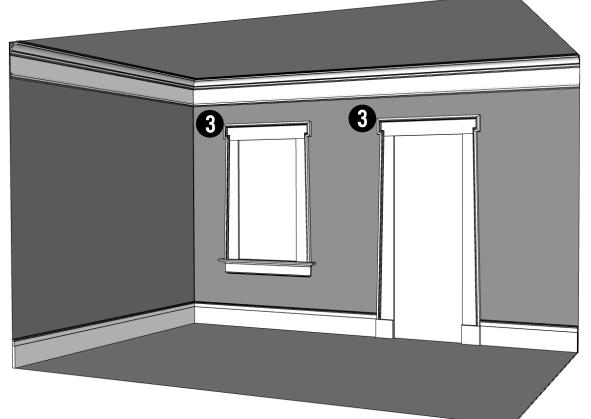




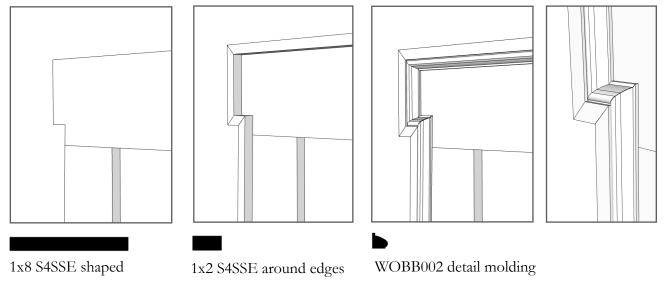

Selected Details, Ref. No. WOGRK007


NOTES ON SPLAYED CASING

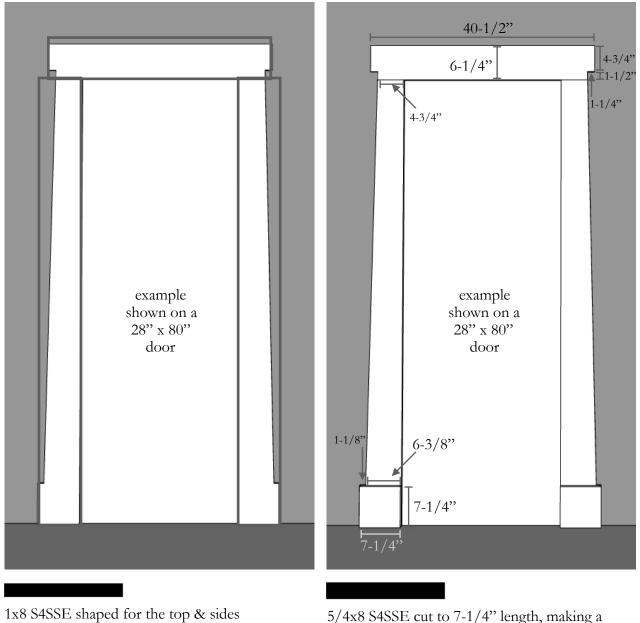

7-1/4" square, backed by the casing.

Selected Details, Ref. No. WOGRK007

NOTES ON SPLAYED CASING

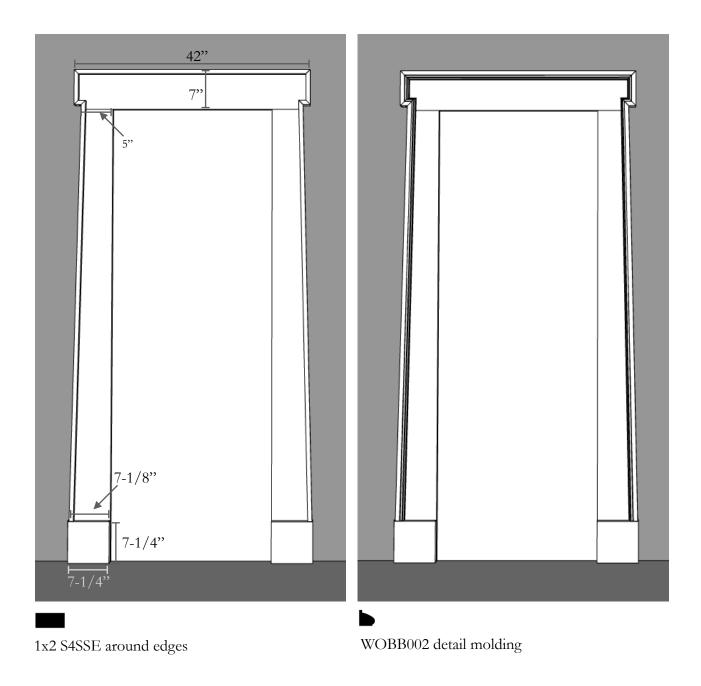

Selected Details, Ref. No. WOGRK007

STOOL & PLINTH DETAILS




Detail of Apron/Stool Buildup


Detail of where plinth block, casing and base buildup meet.

Selected Details, Ref. No. WOGRK007


WINDOW TRIM VARIATIONS

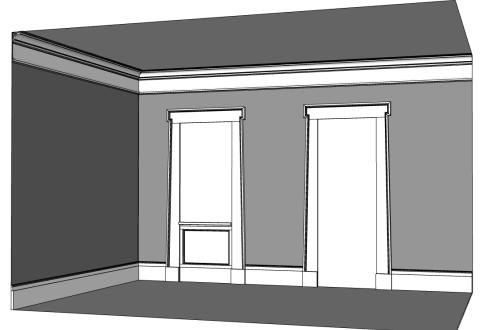


Note: slight recess under window in this version to accommodate panel

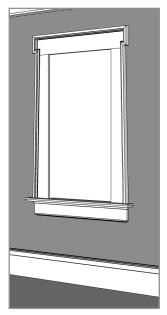

Splayed casing stops at window stool

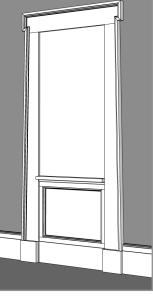

Splayed to plinth blocks with flat panel below

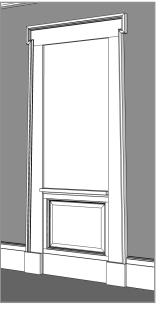

Splayed to plinth blocks with raised panel below