


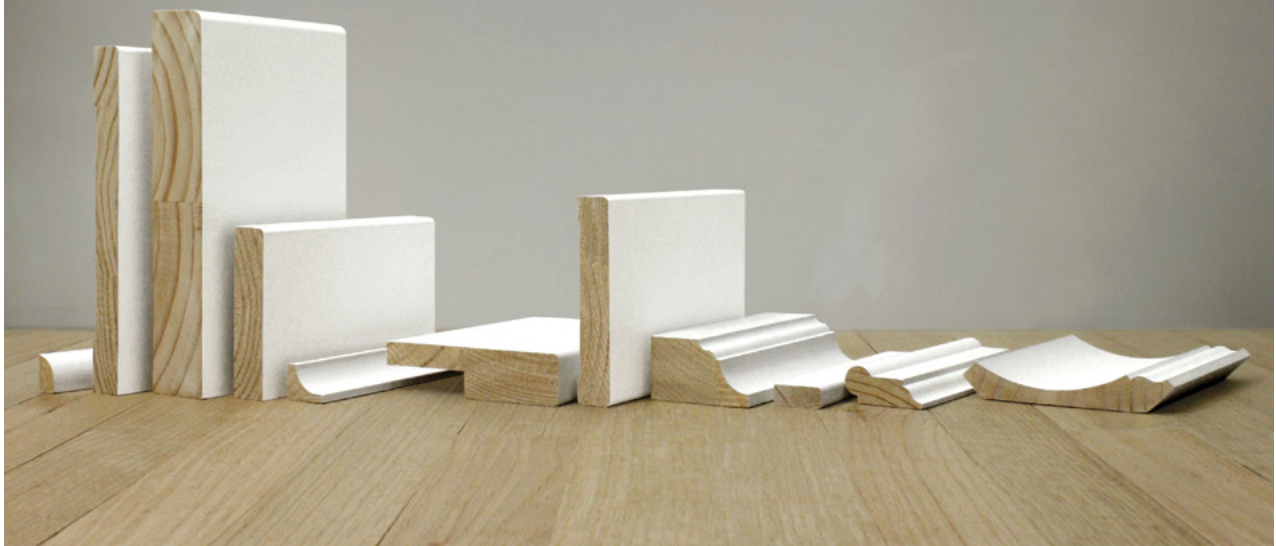









— a whole-room concept —

# CLASSICAL CRAFTSMAN

CLEAN,  
SIMPLE, BOLD



										
BASE SHOE	BASE	PLINTH	APRON	COVE	STOOL	CASING	HEADER CAP	STOP	PICTURE	CROWN
1/2" x 3/4"	3/4" x 7 1/4"	1 3/8" x 8"	3/4" x 3 9/16"	3/4" x 7/8"	1 1/16" x 4 1/4"	3/4" x 4 1/4"	1 5/16" x 2 1/4"	7/16" x 1 1/16"	3/4" x 1 3/4"	3/4" x 4 9/16"
WOBS001	WOBM003	WOPB001	WOCSS004	WOCV001	WOWS002	WOCSS003	WOHC001	WOST001	WOPM004	WOCM005

## HISTORICAL BACKGROUND: 1900-1930

The Classical Craftsman Style is inspired by the Arts and Crafts, Bungalow and Prairie movements. These movements

rejected Victorian era excesses and embraced the desire to emphasize "man-made" over "machine-made" materials.



*cornice buildup:*  
WOCM005  
WOPM004



*beader  
frieze buildup:*  
WOHC001  
1x5 S4SSE  
WOST001



*stool buildup:*  
WOWS002  
WOCV001  
WOCS004



*base buildup:*  
WOBM003  
W OBS001



*plinth buildup:*  
WOCS003  
WOPB001